



Measure size of hatch against height of sheet.



Cut down sheet to fit inside hatch if necessary.



Insert sheet along inside wall of column pushing past any internal resistance.



To work on column, pull flaps around behind pole and secure with Velcro.



When finished work on column, fold sheet flaps back inside hatch and tuck Velcro out of way.

MEASUREMENTS
Millimeters

DWG NO.
BE-12-002

PART NO.
-

TOLERANCE
+/-5%

REVISED
26-Aug-10

DRAWN BY	FULL FILENAME	APPROX. SCALE	DESCRIPTION
CHRIS.DENGATE	M:\DRAWINGS\BALENG\BE-12.VSD	N.T.S.	Instruction set for Column Insulating Sheets.